

 


Parts Manual

Mfg. No: 359447-0044-E1














Model Components	Page
Air Cleaner.....	4
Alternator, Starter Solenoid, Armature.....	6
Controls, Governor Spring, Exhaust.....	8
Crankcase Cover, Lubrication.....	10
Cylinder Head, Valves.....	12
Cylinder, Camshaft, Crankshaft, Piston, Rings, Connecting Rod.....	14
Electric Starter.....	16
Engine and Valve Gasket Kits.....	18
Mixer, Intake Manifold.....	20
Replacement Engine - US & Canada.....	22
Shrouds, Blower Housing, Flywheel.....	23

Not For
Reproduction

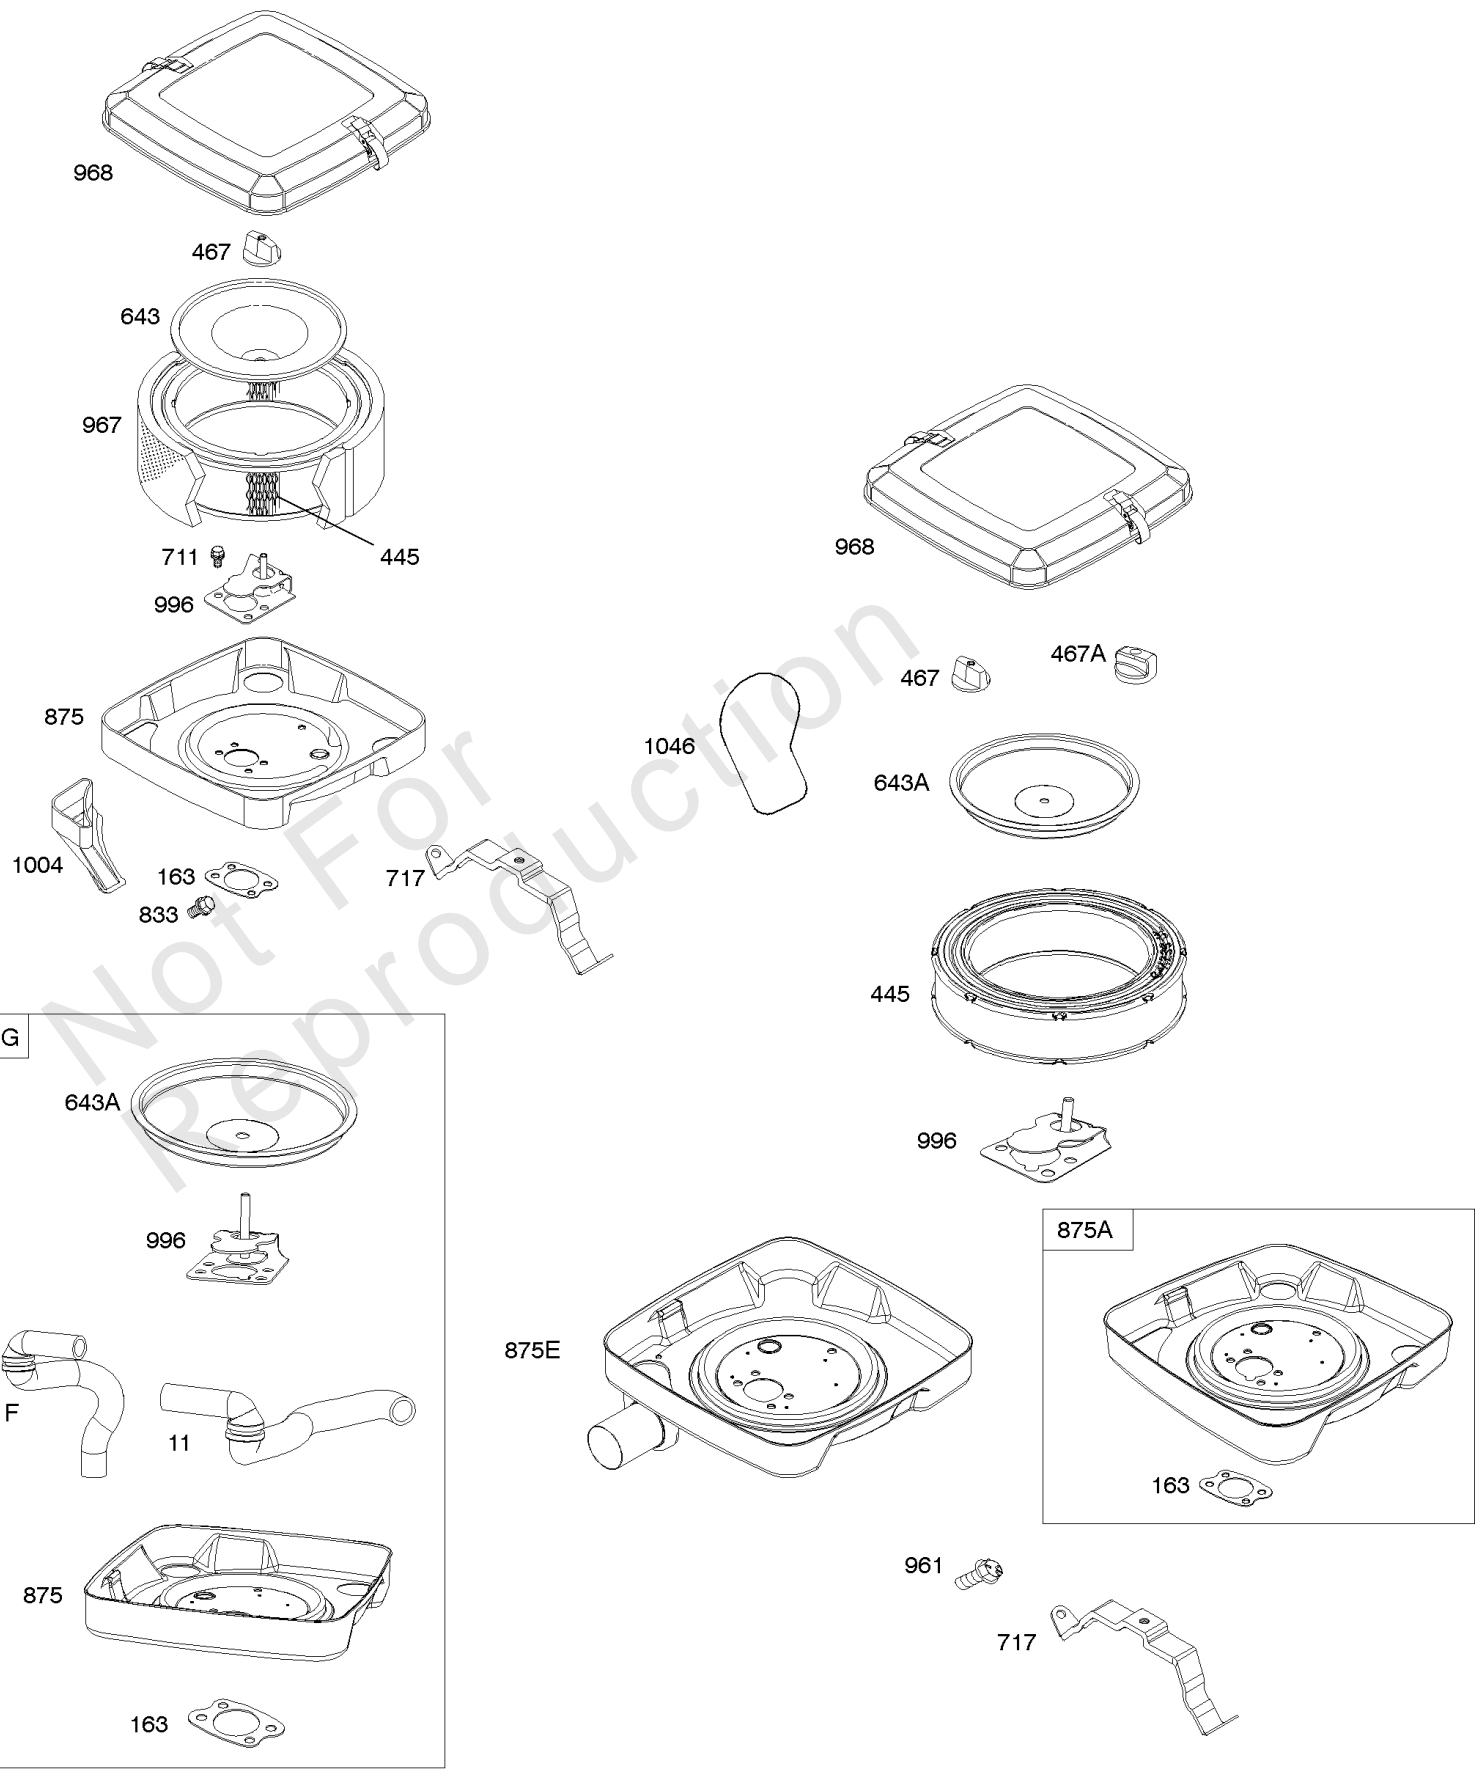











Air Cleaner

REF NO	PART NO	QTY	DESCRIPTION
11	844976		TUBE, Breather
11F	844921		TUBE, Breather
163	692081		GASKET, Air Cleaner -(Air Cleaner)
445	841359		FILTER, A/C Cartridge
467	844618		KNOB, Air Cleaner Cover -Used After Code Date 10033100
467	691985		KNOB, Air Cleaner Cover -Used Before Code Date 10040100
643	692079		RETAINER, Air Filter
711	841233		SCREW -(Carburetor Shield)
717	692153		BRACKET, Air Cleaner
833	841233		SCREW -(Air Cleaner Mounting Strap/Stud)
875	691561		BASE, Air Cleaner -(, For Replacement Order Reference 875G)
875G	846046		BASE, Air Cleaner
967	272490S		FILTER, Pre Cleaner
968	699959		COVER, Air Cleaner
996	844930		SHIELD, Carburetor
1004	842258		DUCT, Air

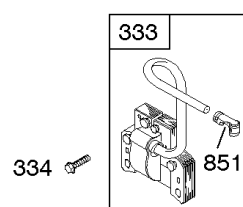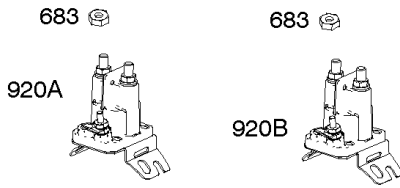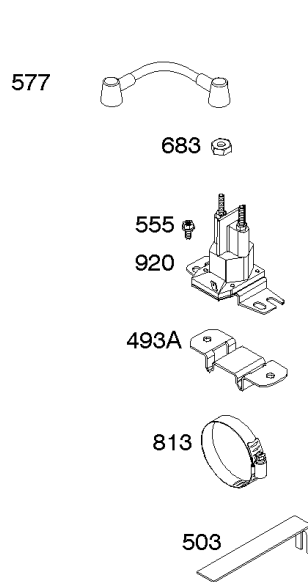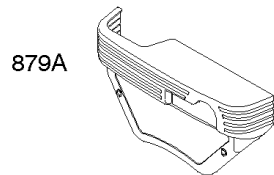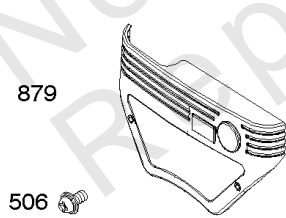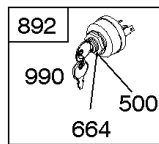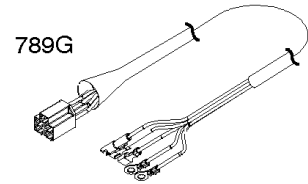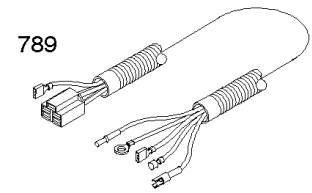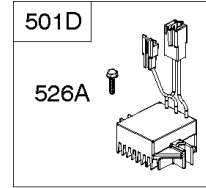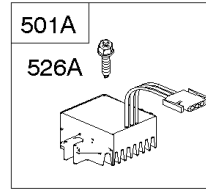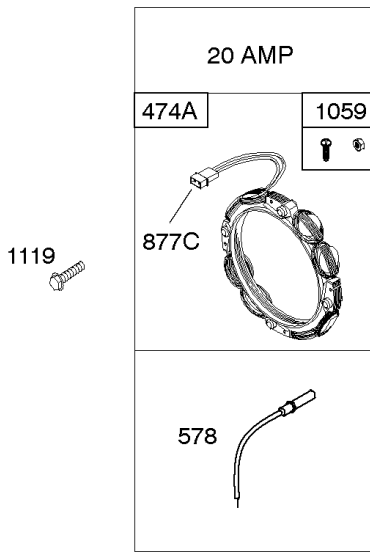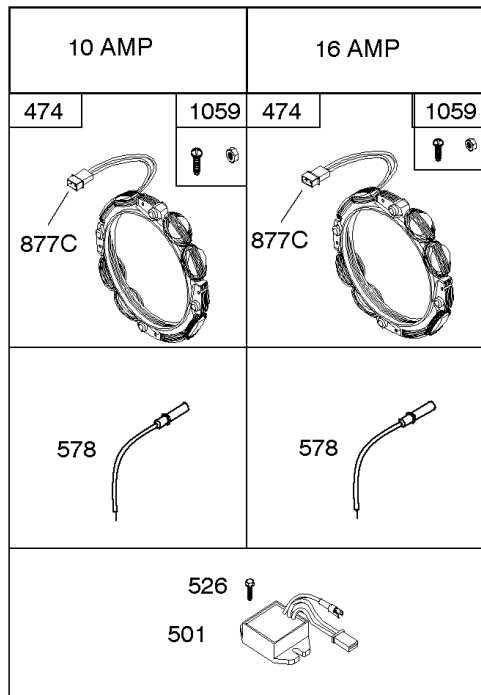             










Alternator, Starter Solenoid, Armature

REF NO	PART NO	QTY	DESCRIPTION
239	491657S		SWITCH, Oil Pressure
333	845606		ARMATURE, Magneto
334	692066		SCREW -(Magneto Armature)
359	691077		WASHER -(Ground Terminal)
373	691612		NUT -(Ground Terminal)
474	592830		ALTERNATOR -(10-16 Amp Regulated)
493A	691177		BRACKET, Mounting
500	691086		WASHER -(Key Switch)
501	845907		REGULATOR -(16 Amp)
503	845016		STRAP, Starter -(60mm)
506	807120		SCREW -(Carburetor/EFI Cover)
507	691972		INSULATOR
520	691084		TERMINAL, Ground
526	692067		SCREW -(Regulator) (M6x12mm)
529	690744		GROMMET
555	692067		SCREW -(Starter Solenoid)
577	690795		CABLE, Starter
578	844547		WIRE ASSEMBLY
683	691029		NUT -(Starter Solenoid)
729	690586		CLIP, Wire
813	690635		CLAMP
851	493880S		TERMINAL, Spark Plug
877C	399916		WIRE/CONNECTOR, Alternator
879	841607		COVER, Carburetor/EFI
920B	846820		SOLENOID, Starter
990	691959		SET, Key
1054	280275		TIE, Cable
1059	698516		KIT, Screw/Washer
1119	691552		SCREW -(Alternator)

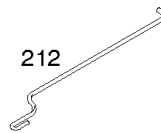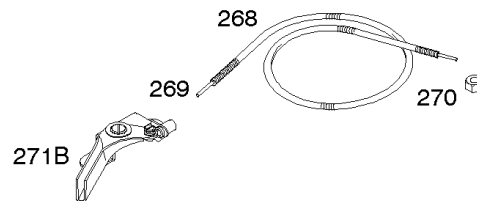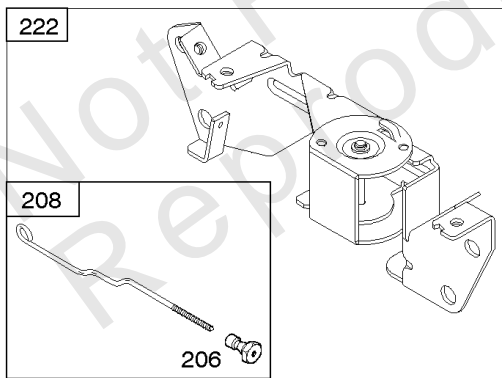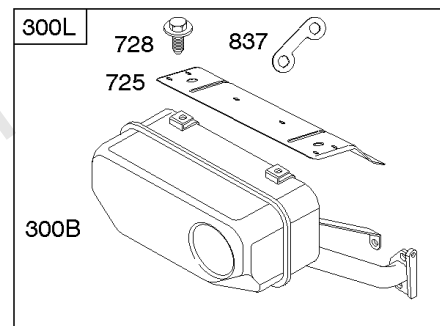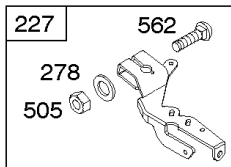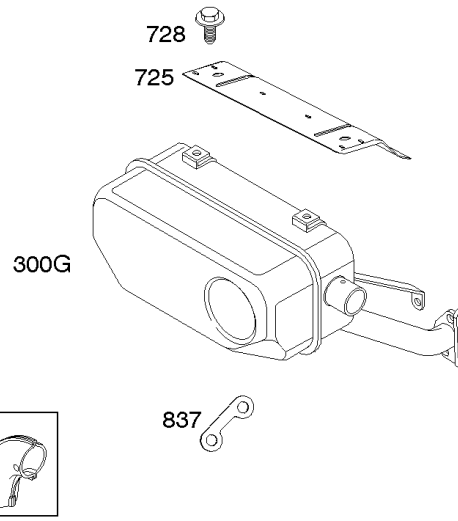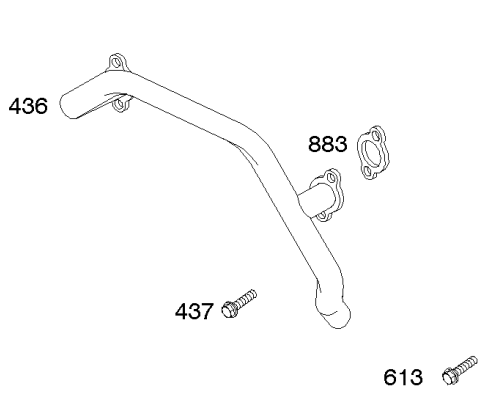          






Controls, Governor Spring, Exhaust

REF NO	PART NO	QTY	DESCRIPTION
188	692056		SCREW -(Control Bracket)
206	691244		NUT, Governor Adjusting
208	808453		ROD, Governor Control
209	691506		SPRING, Governor
211A	692068		SPRING, Governed Idle
212	847015		LINK, Throttle
222	808454		BRACKET, Control
227	845484		LEVER, Governor Control
232	692073		SPRING, Governor Link
262	692083		SCREW -(Rod Bracket)
265	691024		CLAMP, Casing
267	692083		SCREW -(Casing Clamp)
268	691025		CASING, Control Wire -(Cut To Required Length)
269	691026		WIRE, Control -(Cut To Required Length)
270	691027		NUT -(Control Wire Casing)
271B	691028		LEVER, Control
278	842122		WASHER -(Governor Control Lever)
280	691526		BRACKET, Fixed Speed
385	807084		SCREW -(Fuel Pump)
432	691509		CAP, Spring
436	692061		MANIFOLD, Exhaust
437	691902		SCREW -(Exhaust Manifold)
505	690238		NUT -(Governor Lever)
562	690239		BOLT -(Governor Control Lever)
613	692056		SCREW -(Muffler)
676C	495518		DEFLECTOR, Muffler
677	810079		SCREW -(Muffler Deflector)
689	691272		SPRING, Friction
883	691613		GASKET, Exhaust
1054	280275		TIE, Cable

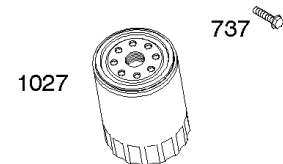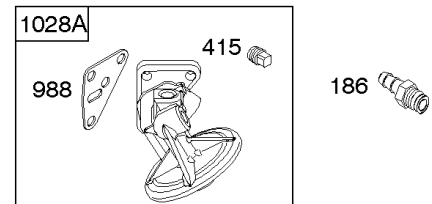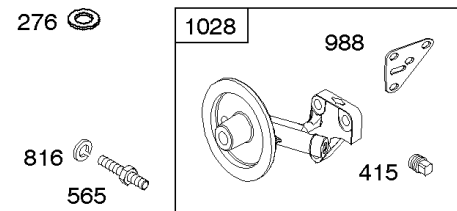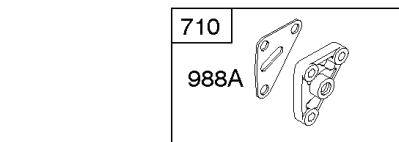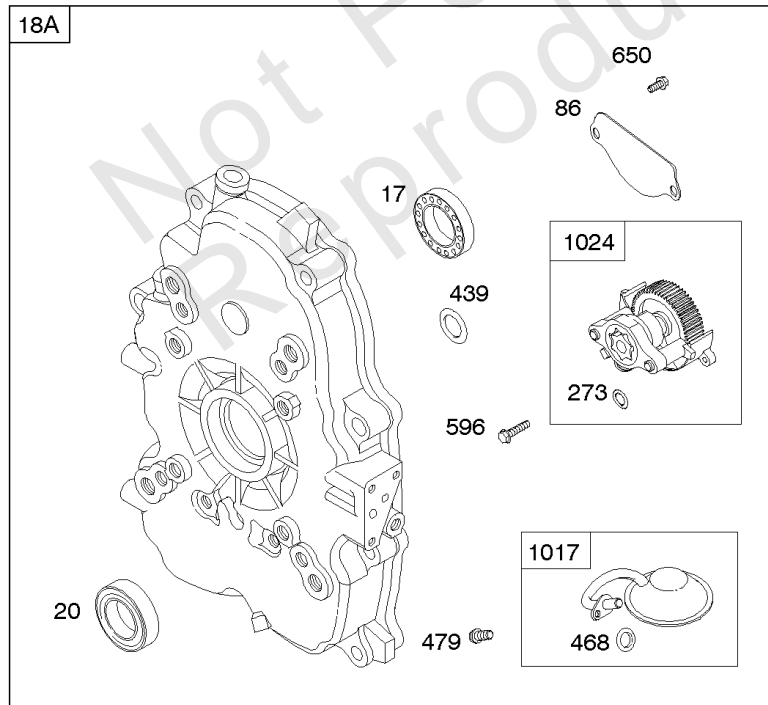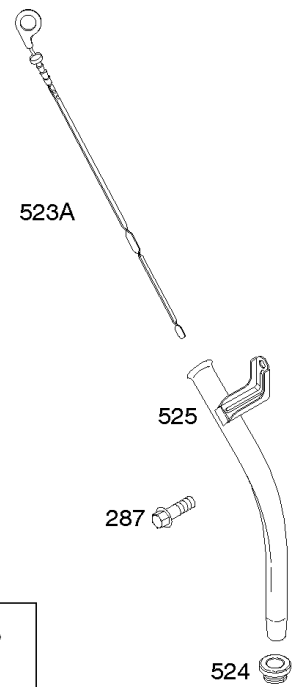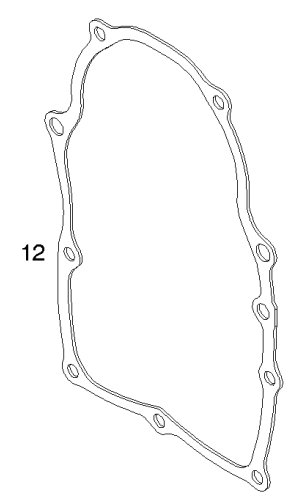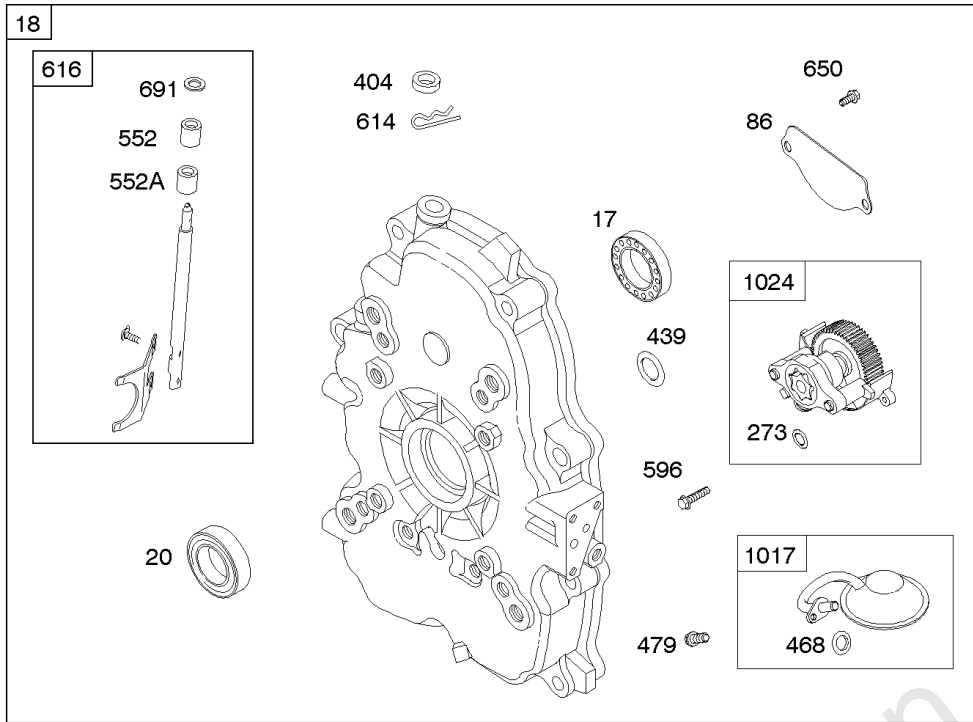         

Crankcase Cover, Lubrication

REF NO	PART NO	QTY	DESCRIPTION
12	846487		GASKET, Crankcase
17	843827		BEARING, Ball
18	844588		COVER, Crankcase
20	805049S		SEAL, Oil -(PTO Side)
22	807362		SCREW -(Crankcase Cover/Sump)
86	690745		COVER, Gear
186	693184		CONNECTOR, Hose
273	690681		SEAL, O-Ring -(Oil Pump)
276	806998		WASHER, Sealing -(LP/NG Fuel Switch)
287	806660		SCREW -(Dipstick Tube)
404	690704		WASHER -(Governor Crank)
415	794903		PLUG
439	692154		O-RING, Oil Gallery -(Crankcase Cover/Sump or Cylinder Assembly)
468	690690		SEAL, O-Ring -(Oil Pump Screen)
479	807084		SCREW -(Oil Pump Screen)
523A	693175		DIPSTICK
524	693172		SEAL, O-Ring -(Dipstick Tube)
525	693174		TUBE, Dipstick
552	690701		BUSHING, Governor Crank
552A	806686		BUSHING, Governor Crank
565	690682		STUD -(Oil Filter Adapter)
596	691492		SCREW -(Oil Pump)
614	691550		PIN, Cotter
616	806685		CRANK, Governor
650	841233		SCREW -(Oil Deflector)
691	842826		SEAL, Governor Shaft
710	807689		COVER, Oil Filter
737	690679		SCREW -(Oil Filter Adapter) (M6x21mm)
816	690706		WASHER -(Oil Filter Adapter)
988	692063		GASKET, Oil Adapter
988A	690687		GASKET, Oil Adapter
1017	690900		SCREEN, Oil Pump
1024	-----		Pump-Oil -Used Before Code Date 07101500
1024	843825		PUMP, Oil -Used After Code Date 07101400
1027	842921		FILTER, Oil -(Premium)
1028	808033		ADAPTER, Oil Filter

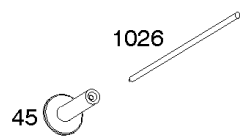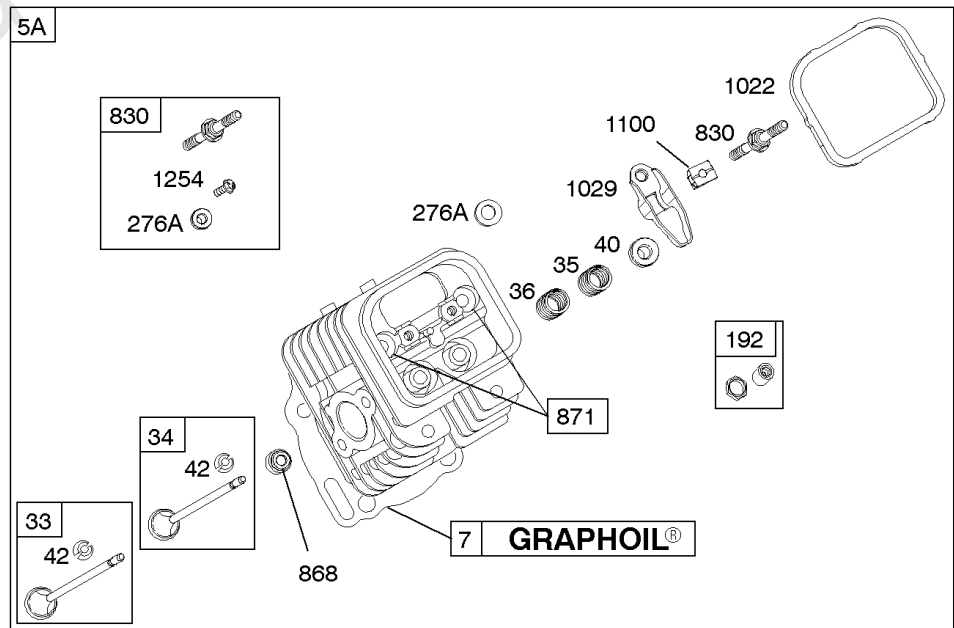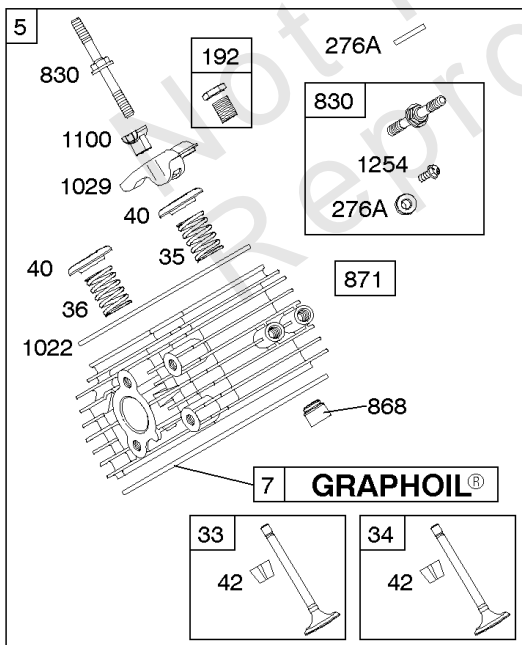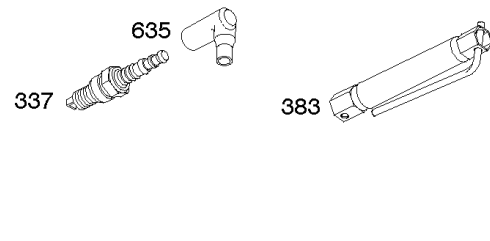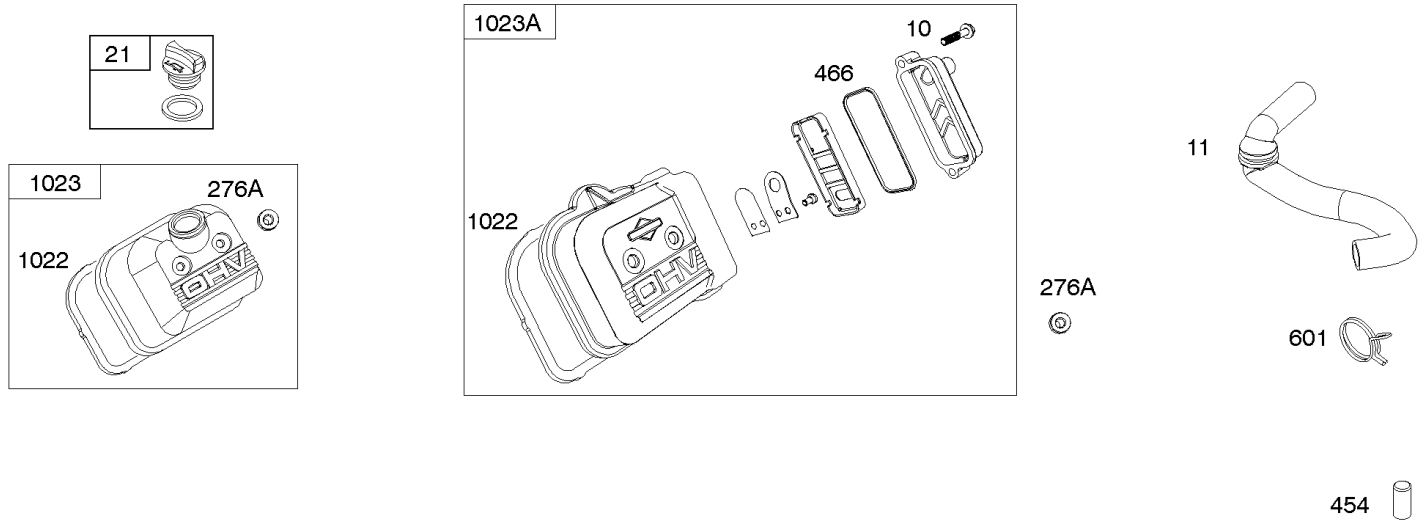     


Cylinder Head, Valves

REF NO	PART NO	QTY	DESCRIPTION
5	808698		HEAD, Cylinder -(Cylinder 1)
5A	808699		HEAD, Cylinder -(Cylinder 2)
7	845884		GASKET, Cylinder Head
10	806421		SCREW -(Breather Assembly)
11	844976		TUBE, Breather
13	692059		SCREW -(Cylinder Head)
21	809500		CAP, Oil Fill
33	808687		VALVE, Exhaust
34	807680		VALVE, Intake
35	692084		SPRING, Valve -(Intake)
36	692084		SPRING, Valve -(Exhaust)
40	692058		RETAINER, Valve
42	807683		KEEPER, Valve
45	843379		TAPPET, Valve
192	807623		ADJUSTER, Rocker Arm
276A	807085		WASHER, Sealing
337	692051		PLUG, Spark
383	19576S		WRENCH, Spark Plug
454	693289		CAP, Breather
466	806466		SEAL, O-Ring -(Breather Assembly)
601	691145		CLAMP, Hose
635	692076		BOOT, Spark Plug
830	809157		STUD, Rocker Arm -(Rocker Arm)
868	691963		SEAL, Valve
871	692057		BUSHING, Valve Guide
1022	806039S		GASKET, Rocker Cover
1023	843749		COVER, Rocker
1023A	843750		COVER, Rocker -(Includes Breather Assembly)
1026	691836		ROD, Push -(Intake)(Steel)
1026	691758		ROD, Push -(Exhaust)(Aluminum)
1029	807323		ARM, Rocker
1100	791959		PIVOT, Rocker Arm
1254	807084		SCREW -(Rocker Arm Stud)








1036 EMISSIONS LABEL

1330 REPAIR MANUAL

 1319 WARNING LABEL

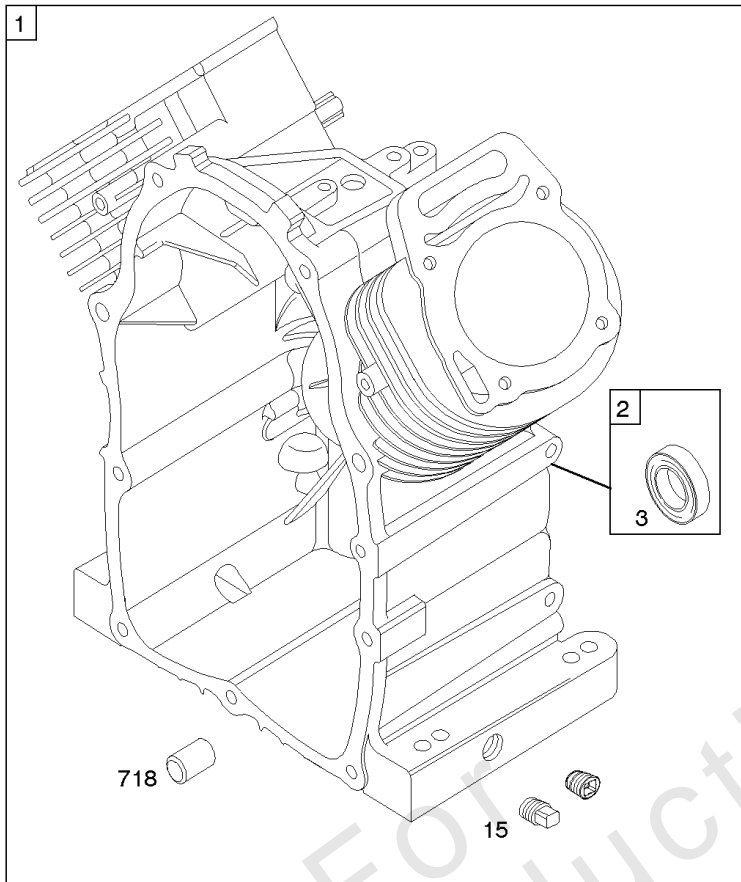


Not For Reproduction

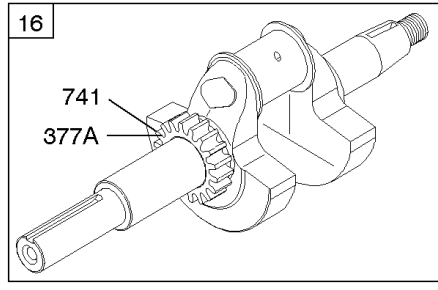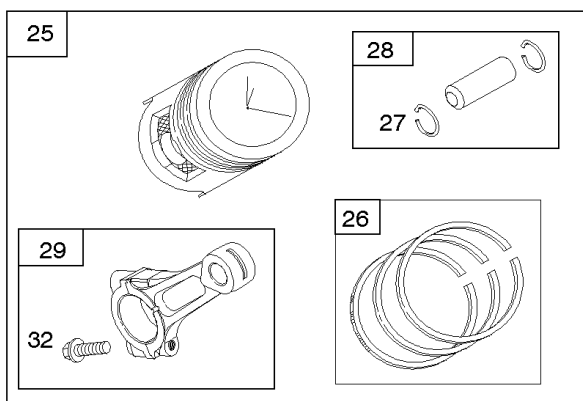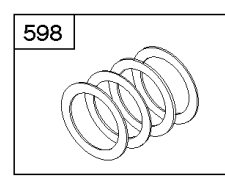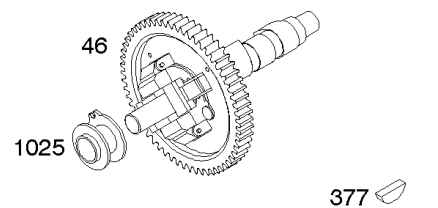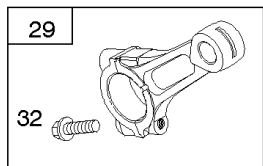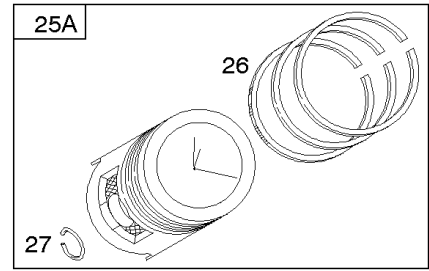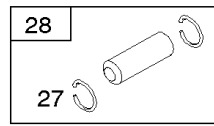       


Cylinder, Camshaft, Crankshaft, Piston, Rings, Connecting Rod

REF NO	PART NO	QTY	DESCRIPTION
1	808702		CYLINDER ASSEMBLY
2	808534		KIT, Bushing/Seal -(Magneto Side)
3	805101S		SEAL, Oil -(Magneto Side)
15	691680		PLUG, Oil Drain -(3/8"-18 NPTF - Internal 3/8" Sq)
15	690946		PLUG, Oil Drain -(3/8"-18 NPTF-External 7/16" Sq)
16	843797		CRANKSHAFT
17	843827		BEARING, Ball
25	844540		PISTON ASSEMBLY -(Standard)
25A	843821		PISTON ASSEMBLY -(.020 Oversize)
26	843822		SET, Ring -(.020 Oversize)
26	843793		SET, Ring -(Standard)
27	690683		LOCK, Piston Pin
28	807886		PIN, Piston -(Standard)
29	807900S		ROD, Connecting
32	690698		SCREW -(Connecting Rod)
46	845649		CAMSHAFT
377	808095		KEY, Flywheel
377A	691639		KEY, Timing
598	807625		SHIM, End Play -(Crankshaft or Camshaft Bearing)
718	806469		PIN, Locating
741	846085		GEAR, Timing
1025	690689		SPOOL, Governor
1036	-----		Label-Emissions -(Available From A Briggs & Stratton Authorized Dealer)
1319	794467		LABEL, Warning
1330	272144		MANUAL, Repair


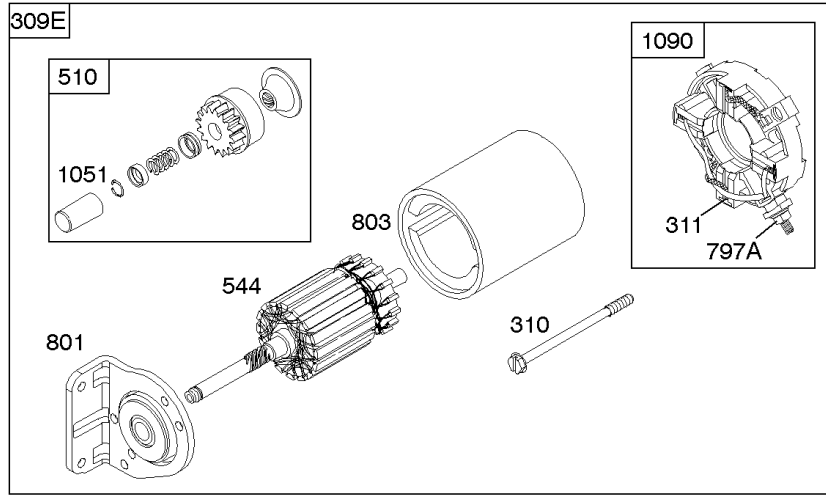 


697

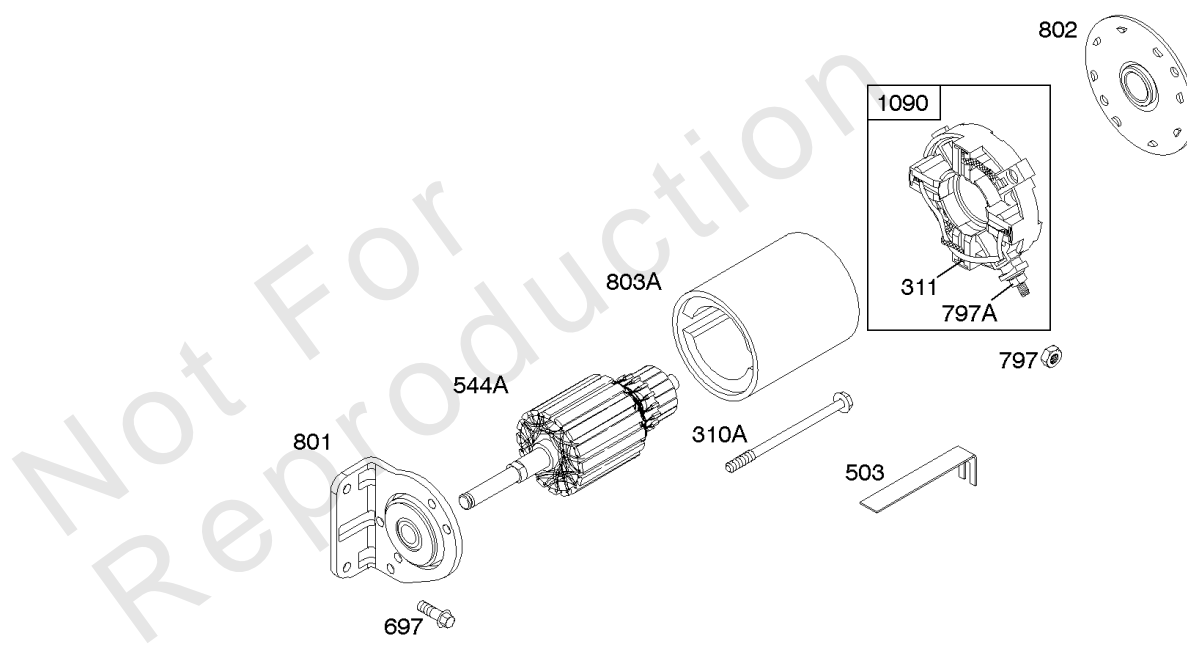 


Electric Starter

REF NO	PART NO	QTY	DESCRIPTION
309E	844717		MOTOR, Starter
310	690323		BOLT -(Starter Motor)
310A	691263		BOLT -(Starter Motor) (4 3/8 Housing)
311	497608		SET, Brush
503	845016		STRAP, Starter -(60mm)
510	496881		DRIVE, Starter
544	-----		Armature-Starter -(For Replacement Starter Armature, Order 691564 Starter Motor, Reference309)
544A	BLANK		MOTOR, Starter -(Replacement Starter Armature, Order 691564 Starter Motor, Reference309)
697	692062		SCREW -(Starter Motor) (Drive Cap)
797	691029		NUT -(Brush Retainer)
797A	693167		NUT -(Brush Retainer)
801	-----		Cap-Drive
802	691286		CAP, End
803	-----		Housing-Starter -(For Replacement Starter Housing, Order Reference 309)
803A	693547		HOUSING, Starter -(Replacement Starter Housing, Order Reference 309)
1051	691124		RING, Retaining
1090	691293		RETAINER, Brush

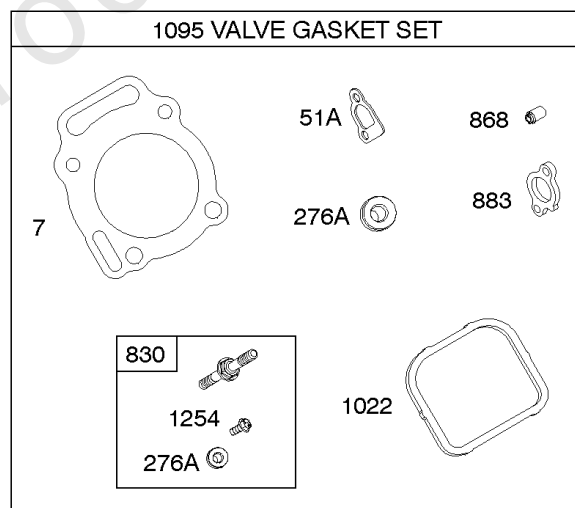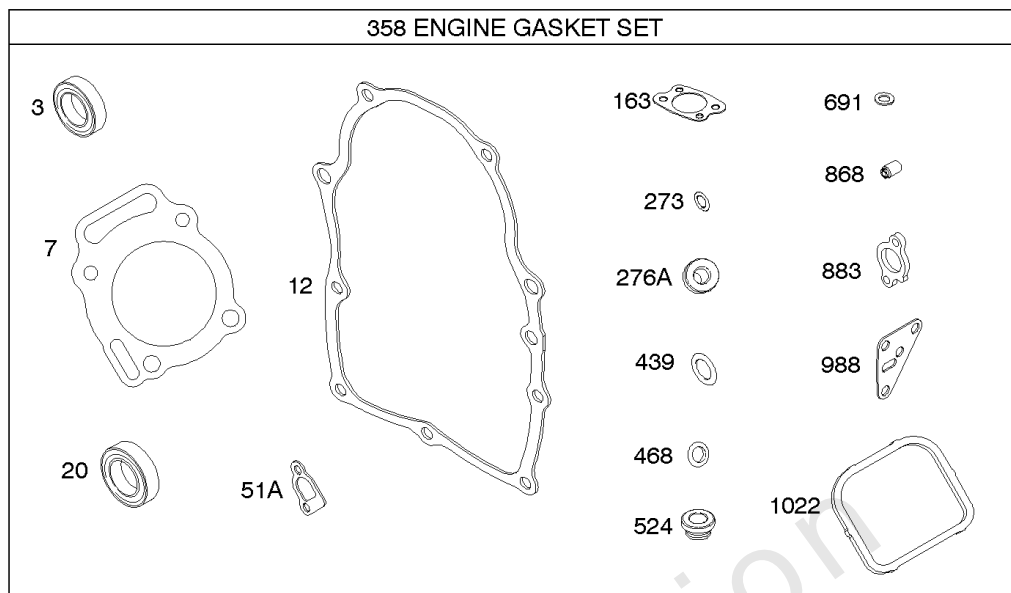  


Engine and Valve Gasket Kits

REF NO	PART NO	QTY	DESCRIPTION
3	805101S		SEAL, Oil -(Magneto Side)
7	845884		GASKET, Cylinder Head
12	846487		GASKET, Crankcase
20	805049S		SEAL, Oil -(PTO Side)
51A	692035		GASKET, Intake -(Manifold to Cylinder Head)
163	692081		GASKET, Air Cleaner -(Air Cleaner)
273	690681		SEAL, O-Ring -(Oil Pump)
276A	807085		WASHER, Sealing
358	841188		GASKET SET, Engine
439	692154		O-RING, Oil Gallery -(Crankcase Cover/Sump or Cylinder Assembly)
468	690690		SEAL, O-Ring -(Oil Pump Screen)
524	693172		SEAL, O-Ring -(Dipstick Tube)
691	842826		SEAL, Governor Shaft
830	809157		STUD, Rocker Arm -(Rocker Arm)
868	691963		SEAL, Valve
883	691613		GASKET, Exhaust
988	692063		GASKET, Oil Adapter
1022	806039S		GASKET, Rocker Cover
1095	841191		GASKET SET, Valve
1254	807084		SCREW -(Rocker Arm Stud)

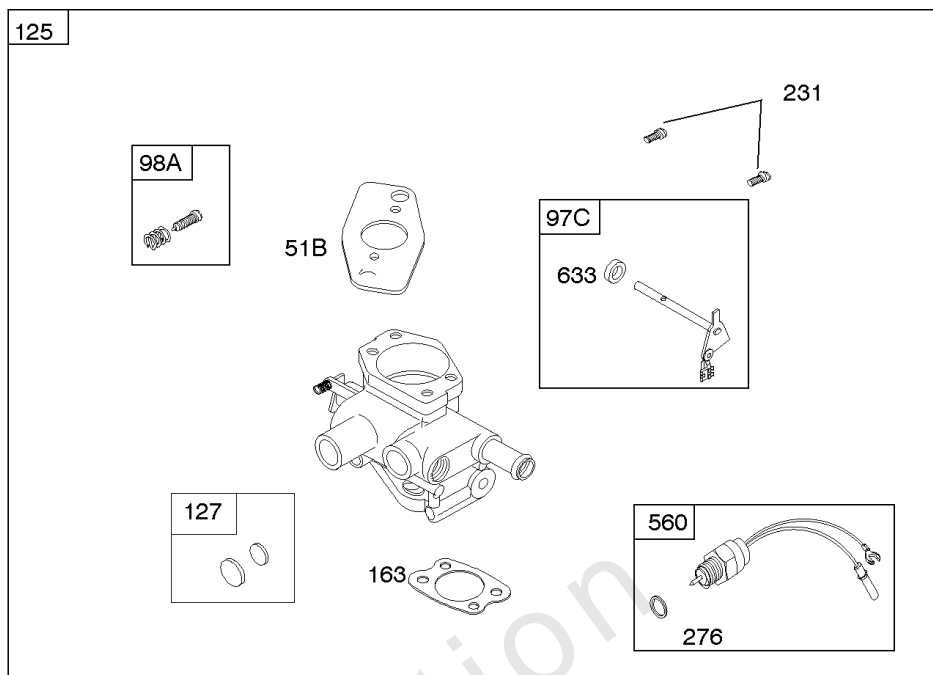 

Not For
Reproduction

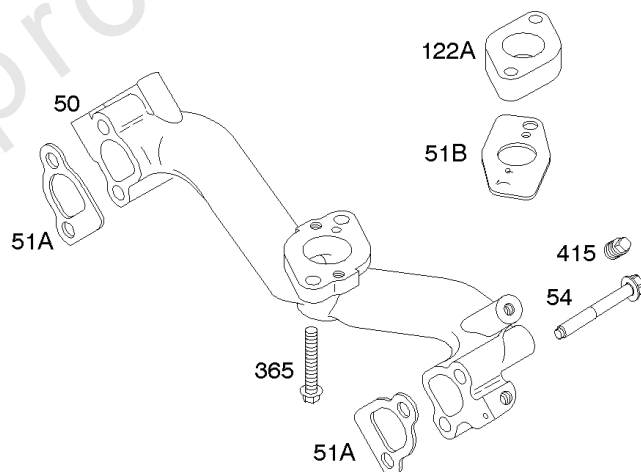 


Mixer, Intake Manifold

REF NO	PART NO	QTY	DESCRIPTION
50	692124		MANIFOLD, Intake
51A	692035		GASKET, Intake -(Manifold to Cylinder Head)
51B	806457		GASKET, Intake -(Manifold/Carburetor Spacer)
54	846604		SCREW -(Intake Manifold) (M8x67mm) (Dog Point)
97C	808397		SHAFT, Throttle
98A	808177		KIT, Idle Speed
122A	690747		SPACER, Carburetor
125	808692		CARBURETOR
127	806460		PLUG, Welch
163	692081		GASKET, Air Cleaner -(Air Cleaner)
231	690718		SCREW -(Choke Valve)
276	806998		WASHER, Sealing -(LP/NG Fuel Switch)
365	690711		SCREW -(Carburetor/Throttle Body)
415	794903		PLUG
560	808693		SWITCH, LP/NG Fuel
633	806131		SEAL, Choke/Throttle Shaft

Replacement Engine - US & Canada

REF NO	PART NO	QTY	DESCRIPTION
	3594470044	1	Replacement Engine
	-----		Top No-Load Speed: 3750 -Trim: ALL
	-----		Service Note: For all Go-Karts use only a Model 136200 series engine as a replacement, regardless of the original Model.

 Not For Reproduction

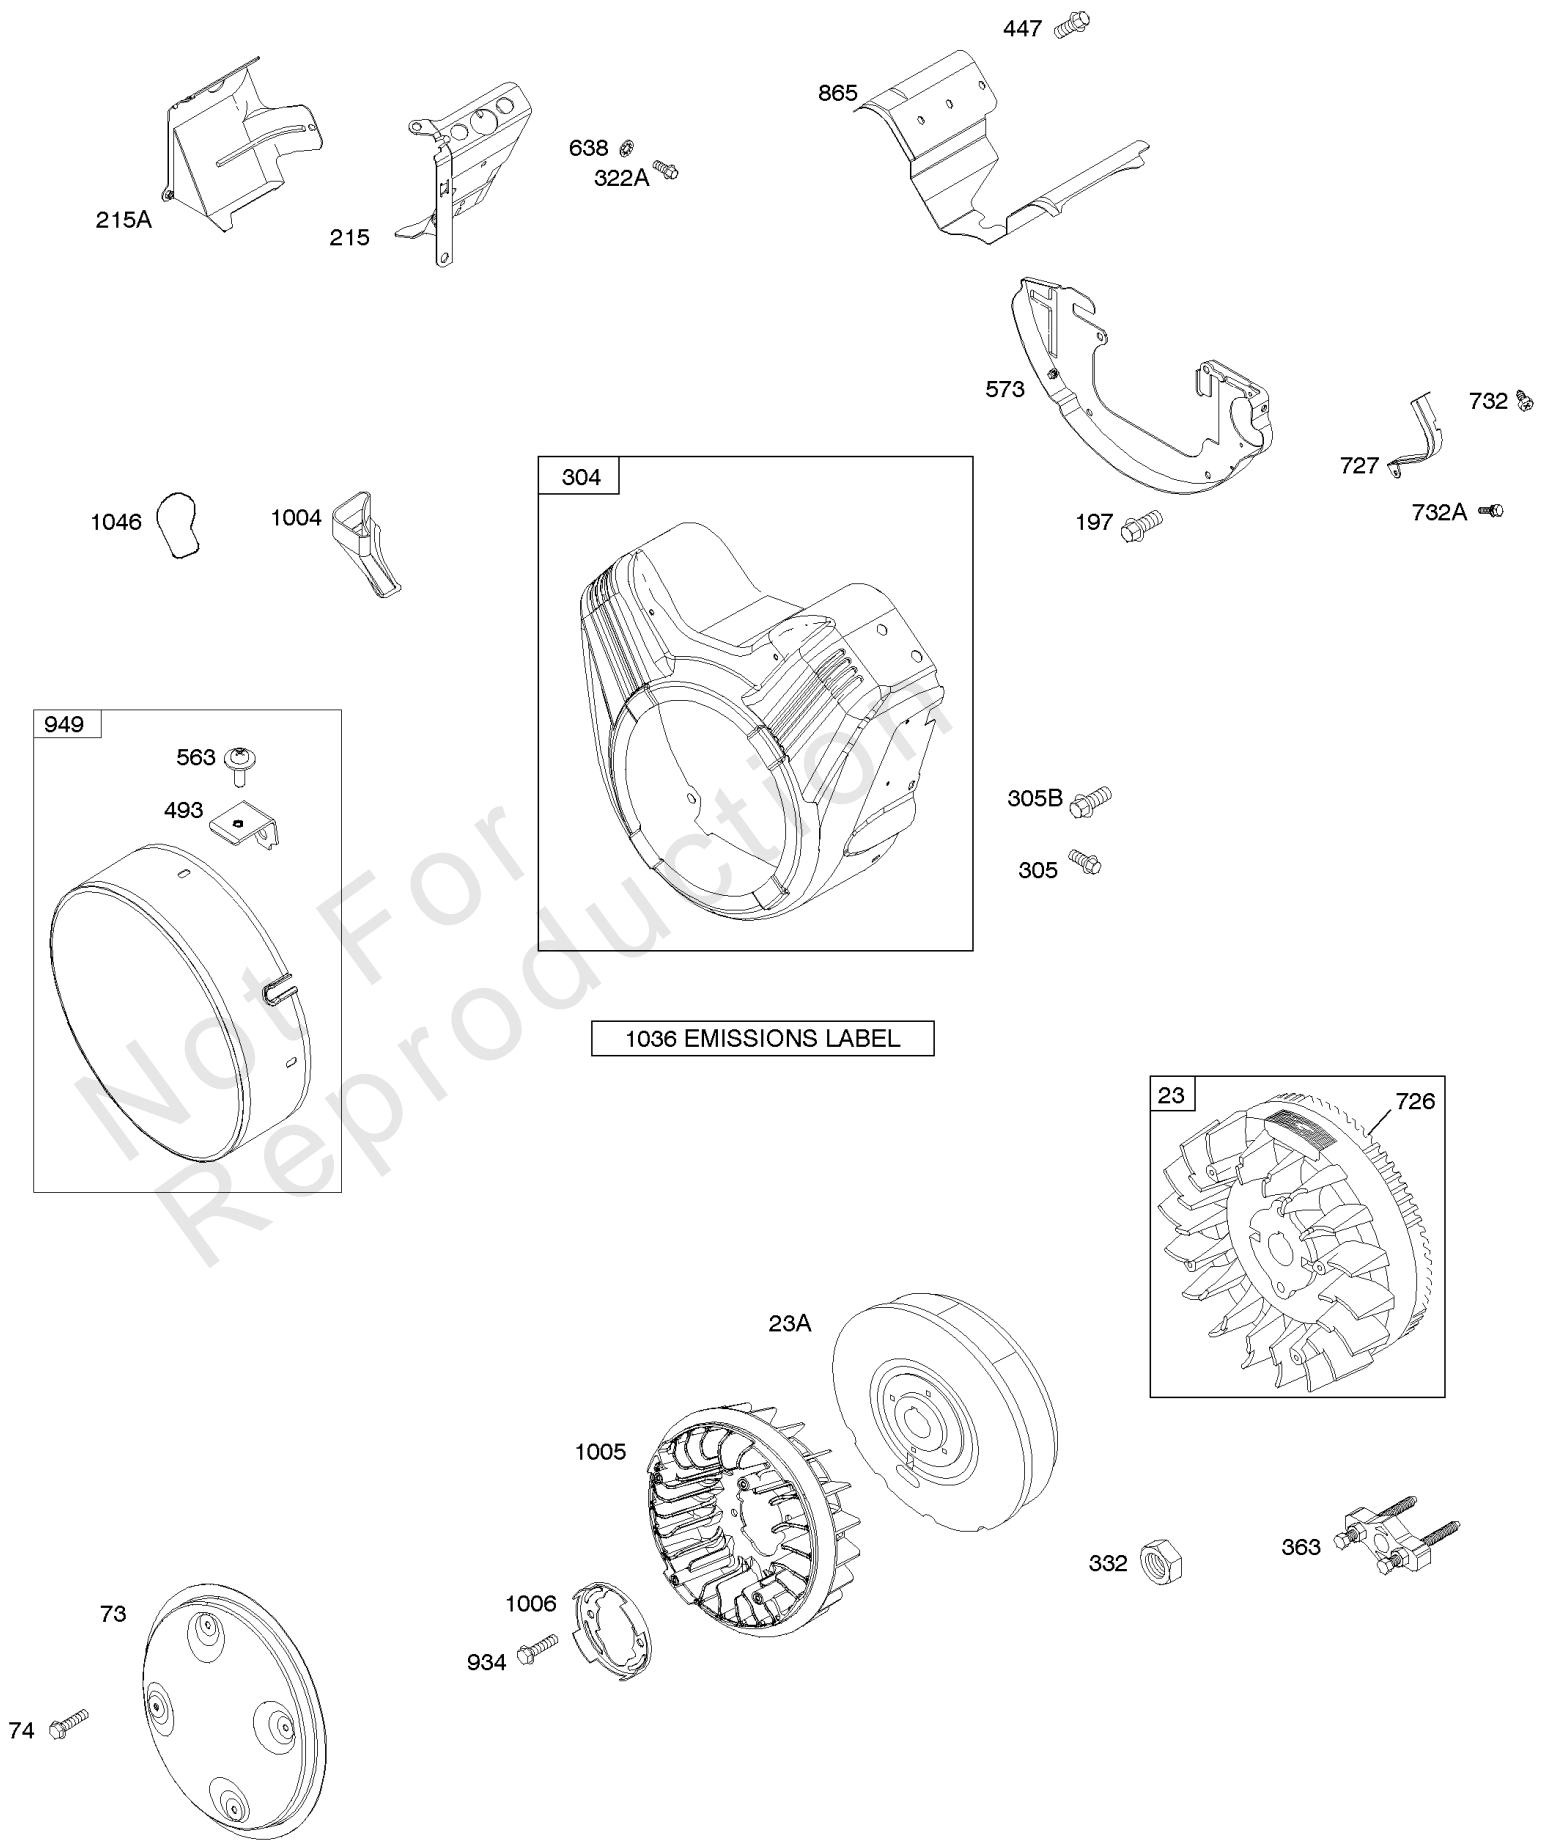

Shrouds, Blower Housing, Flywheel

REF NO	PART NO	QTY	DESCRIPTION
23	809236		FLYWHEEL
73	841440		SCREEN, Rotating
74	841441		SCREW -(Rotating Screen)
197	807163		SCREW -(Back Plate)
215	841183		GUIDE, Air -(Left or Cylinder #1)
215A	841182		GUIDE, Air -(Right Or Cylinder #2)
304	844153		HOUSING, Blower
305	692056		SCREW -(Blower Housing)
305B	807163		SCREW -(Blower Housing)
322A	841233		SCREW -(Cylinder Head Cover)
332	690887		NUT -(Flywheel)
363	19203		PULLER, Flywheel
447	841233		SCREW -(Air Guide Cover)
493	845729		BRACKET, Mounting
563	841735		SCREW -(Debris Screen Guard)
573	841310		PLATE, Back
638	691551		WASHER -(Cylinder Head Cover)
726	-----		Gear-Ring -(Steel)(See Reference 23 for Service)
727	841313		COVER, Starter Drive
732	690688		SCREW -(Starter Drive Cover)
732A	841233		SCREW -(Starter Drive Cover)
865	843768		COVER, Air Guide
934	691058		SCREW -(Fan Retainer)
949	845728		GUARD, Debris Screen
1004	842258		DUCT, Air
1005	841439		FAN, Flywheel
1006	690452		RETAINER, Fan
1036	-----		Label-Emissions -(Available From A Briggs & Stratton Authorized Dealer)

